

# Shooting object hit the salmon | Beach

1150 9305

## Water connection:

Not relevant

## Water consumption:

Not relevant

## Water pressure:

Not relevant

## Minimum water depth:

Not relevant

## Maximum water depth:

 
 
400mm

## Mounting instruction:


Aqua Drolics system B

## Suitable for age:

0-4  5-8  >9

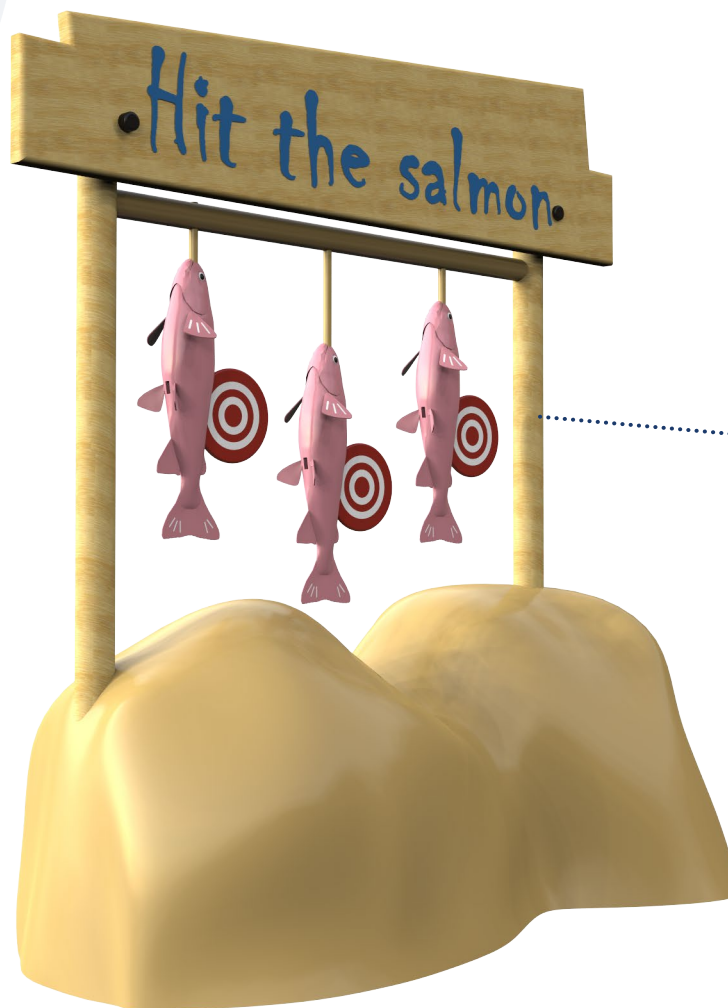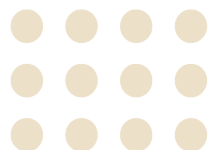

 Use your shooter to hit the targets.  
After hitting a target, the fish will  
rock back and forth.

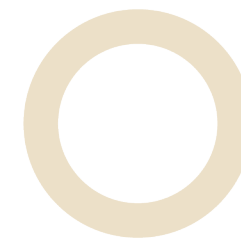


# Shooting object hit the salmon | Beach


1150 9305



 910 mm

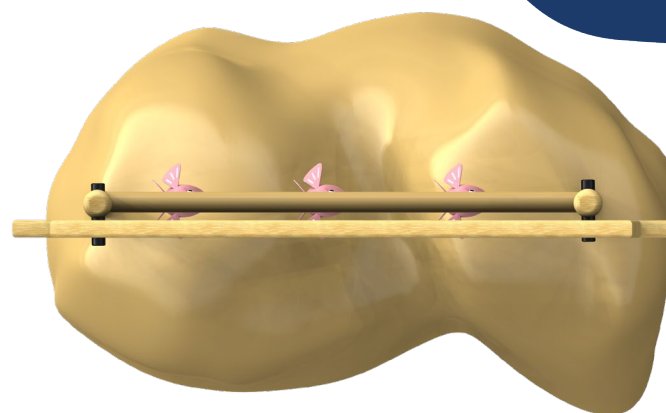

1515 mm

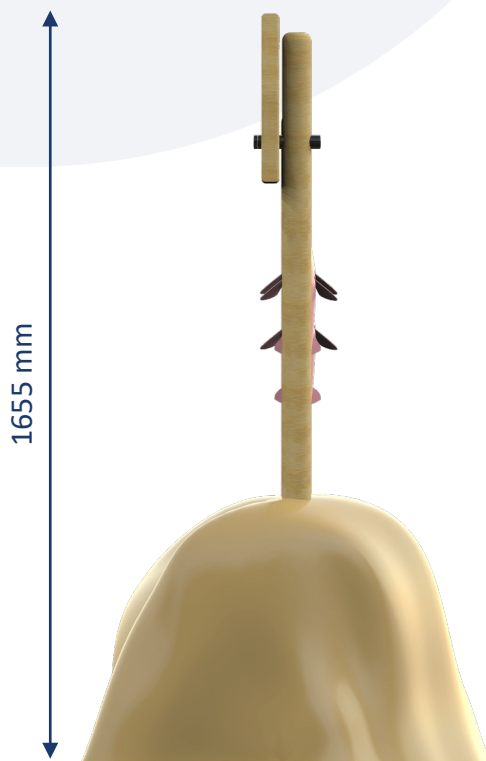 

1655 mm

910 mm



1655 mm

1515 mm